


PACKAGE CONTENTS

- 1 - Assembly Instructions Sheet
- 1 - 80-Ball Capacity Basket Assembly
- 1- Basket Lid
- 1 - Pickup Tray
- 2 - Handles
- 4 - Flat Washers
- 4 - Locking Nuts
- 1 - Wrench

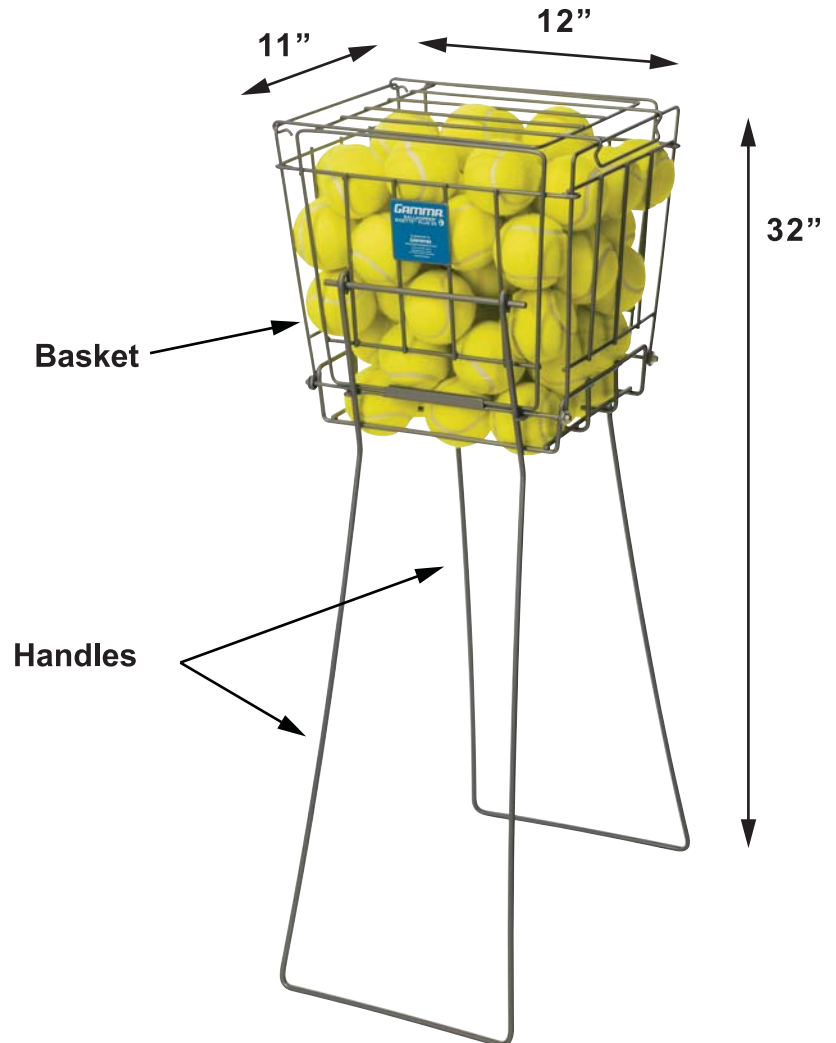

ASSEMBLING THE BASKET

- Step 1: Place the Pickup Tray upright on a flat surface and unfold the Basket Assembly into a rectangle. Slide the loops on one end of the Basket Assembly over the threaded studs of the Pickup Tray. Place on Flat Washer and then one Locking Nut on each of the threaded studs over which you hooked the two Basket Assembly loops. Repeat this step for the loops on the opposite side of the Basket.
- Step 2: With the Basket sitting on the ground, take one Handle, spread the ends of the Handle, and place the Handle end loops around the wires on one side of the Basket below the logo. Repeat this step for the Handle on the opposite side of the Basket.
- Step 3: Take the Basket lid and, with the hooks facing down, place the lid on top of the Basket with the hooks near the side. Slide the hooks over the top wire of the Basket and pull toward you until the lid hooks pop on to the Basket. When installed properly the lid will close completely and be secured by the lip of the lid.

PICKING UP BALLS

With the Basket sitting on the ground and the Handles in the up position, pick up the Basket by the Handles and place it down on top of the ball. With very little downward pressure, the ball will pop through the wires at the bottom of the Basket. Once balls are picked up, they will not fall out through the wires at the bottom.

DISPENSING BALLS

When you are done picking up balls and are ready to dispense balls from the Basket, pick up the Basket allowing the Handles to swing toward the ground. Stand the Basket up on the Handles, push the handles inward toward the Basket until they lock in place between the two c-shaped hooks, then open the lid to start dispensing balls.

LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the BALLHOPPER Basket ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.