 


### PACKAGE CONTENTS

- 1 - Assembly Instructions Sheet
- 1 - Handle
- 1 - Basket
- 1 - Tray
- 4 - Legs
- 4 - Casters
- 12 - 30mm Bolts
- 12 - Ny-Lok Nuts

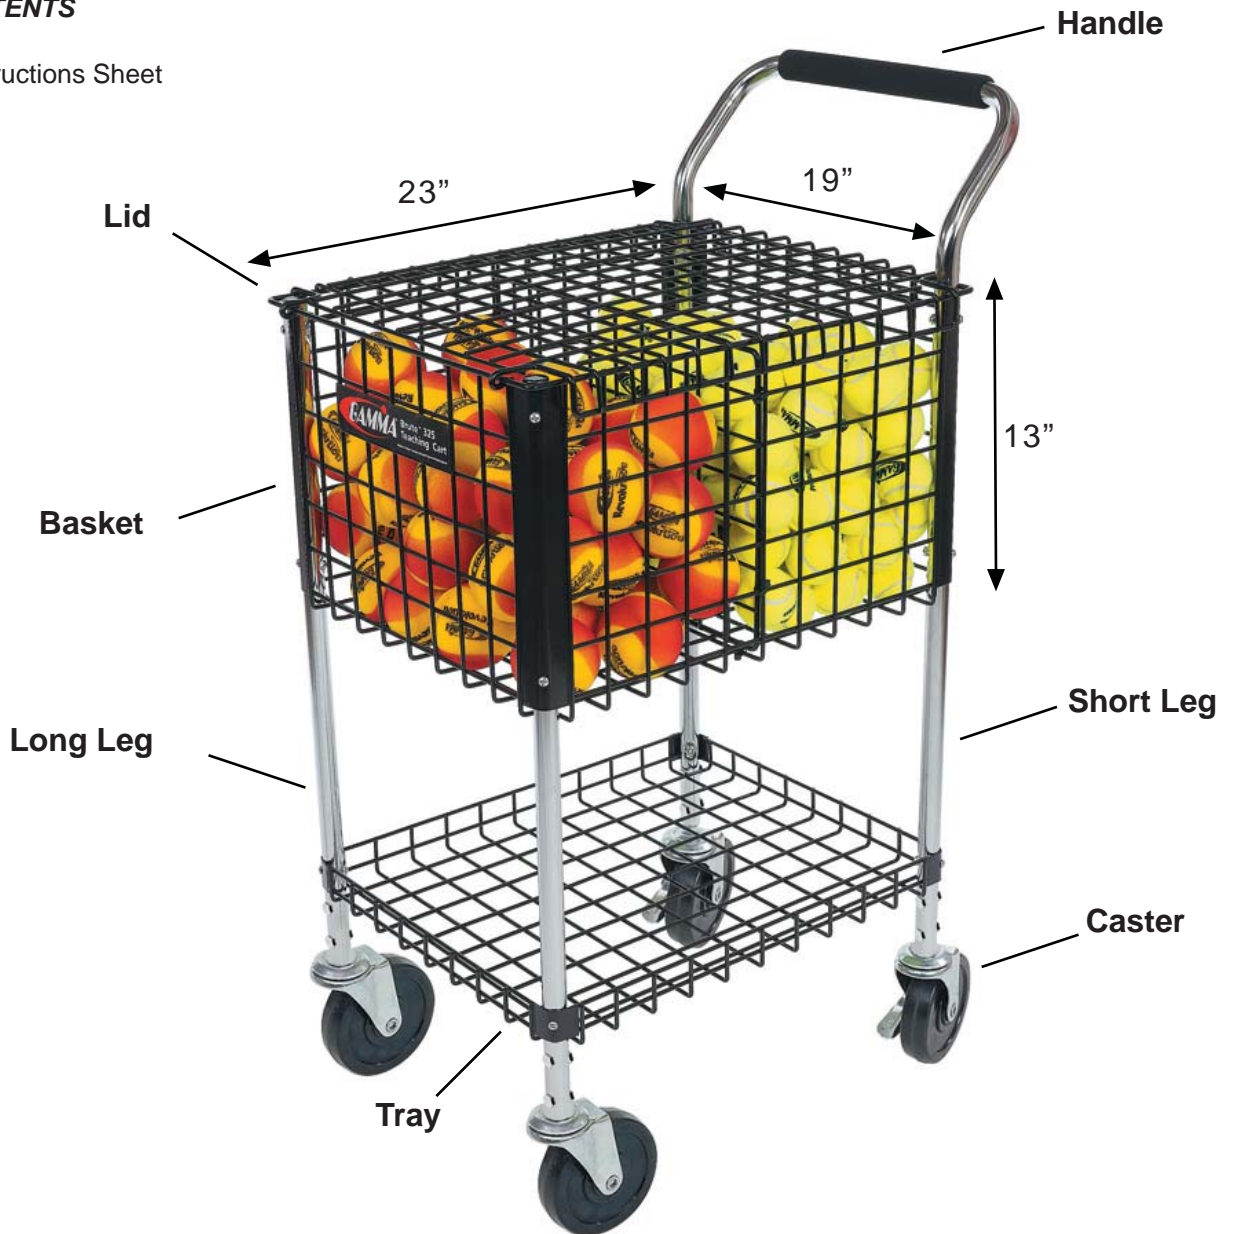

### ASSEMBLING THE CART

Step 1: Insert legs through the tray and bolt tray to the lowest available hole on the leg.

 
Step 2: Push the two shorter legs into place through the bottom of the basket. The shorter legs should be inserted at front of the basket, opposite the lid hinge. Insert the bolts through the corner brackets and holes in the legs, and attach the nuts from the inside into the handle tubes. Align the holes in the corner bracket with the holes. Loosely secure the legs using the 30mm bolts and Ny-Lok locking nuts.

Step 3: Push the two longer legs into place through the bottom of the basket, making sure that the end with the nut welded inside is positioned on the bottom and align their mounting holes with the matching holes in the corner angles of the basket. Loosely secure the legs using the 30mm bolts and Ny-Lok locking nuts.

Step 4: Insert the handle into the inside back of the basket opposite the lid hinge and secure the handle using the 30mm bolts and Ny-Lok locking nuts.

Step 5: Tighten all bolts and nuts securely.


### CASTER ASSEMBLY

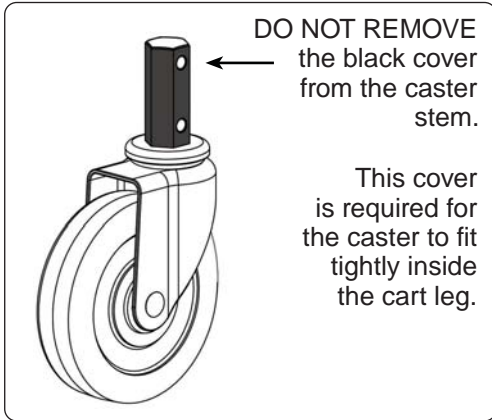

Step 1: Insert caster into the bottom of the cart leg.

Step 2: Align leg holes with caster holes, insert bolts and attach nuts.

 Step 3: Tighten nuts/bolts to secure casters in place.

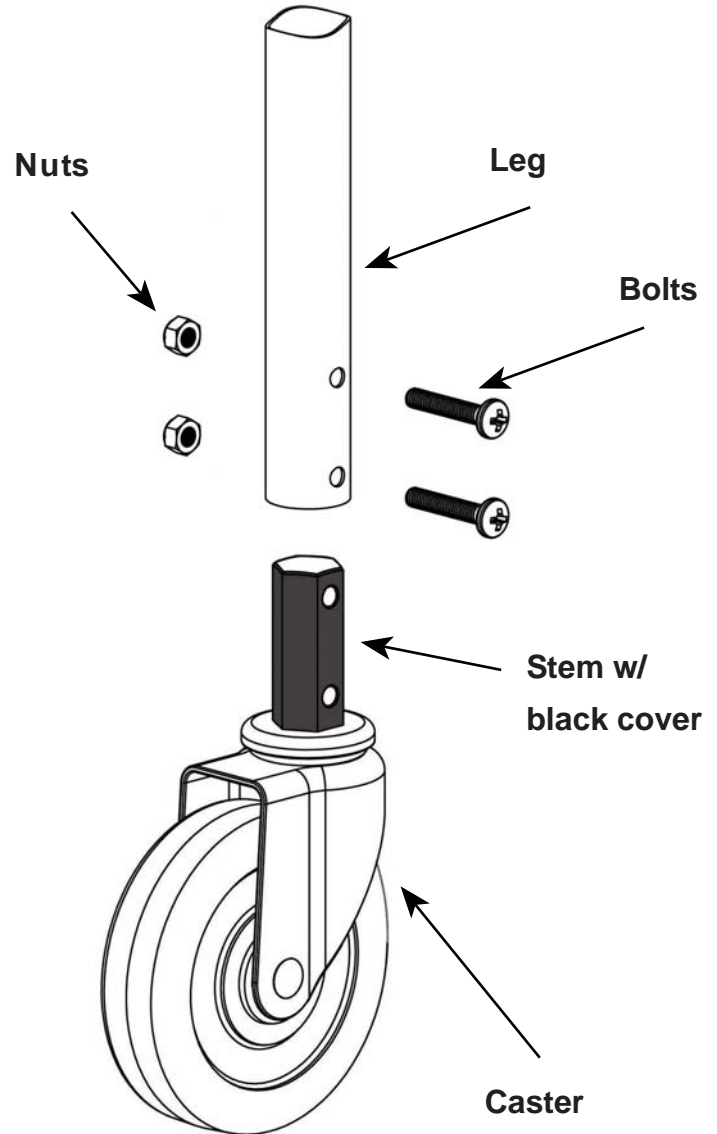

### LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the BALLHOPPER Cart ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.