


### PACKAGE CONTENTS


- 1 - EZ Basket 150 Bag (pic. 1)
- 1 - Handle (pic. 2)
- 1 - Frame Assembly - black (pic. 3)
- 1 - Base Assembly - red (pic. 4)



pic. 1

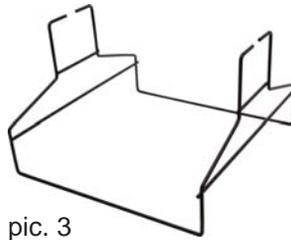


pic. 3

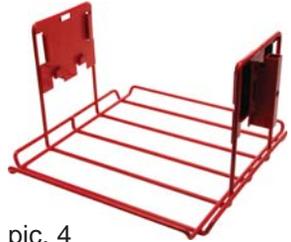

pic. 4



pic. 2

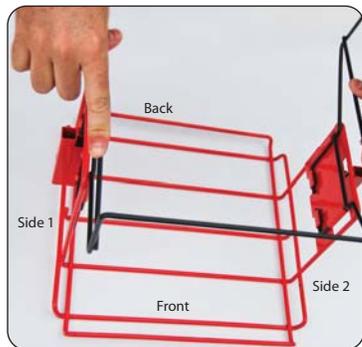

Step 1: Insert the wires of the black Frame Assembly into the slots on each side of the red Base Assembly.



Step 2: Slide EZ Basket 150 Bag over the Frame/Base, with the handles oriented to the front and back of the Base Assembly.



Step 3: Inside bag near the top, separate the hook and loop strips, open the pocket and slide the top wire of the black Frame Assembly inside.



Step 4: With the top wire inside the hook and loop pocket, press the strips together to secure. Repeat Steps 3-4 at the front of the bag.



Step 5: On the inside of the bag, pull the protective flap under the top wire of the black Frame Assembly.



Step 6: Pull the bag opening over the red handle receiver and press on either side to secure the hook and loop strips.




Step 7: On the inside of the bag, press the protective flap against the bottom of the bag to secure the hook and loop closure. Repeat Steps 5-7 on Side 2.



Step 8: Turn the Frame Assembly upside down. At the front, separate the hook and loop strip, and fold it over the first wire of the red Frame Assembly.



Step 9: Press the hook and loop strip together to secure. Repeat Steps 8-9 on the back of the bag.

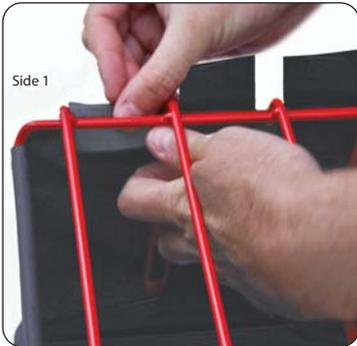

Step 10: On the side, separate the first hook and loop strip, and fold it over the first wire of the red Frame Assembly.



Step 11: Press the hook and loop strip together to secure. Repeat Steps 10-11 for all hook and loop flaps on Side 1 and Side 2. When completed, turn the basket over so it is right-side up.



Step 12: On Sides 1 & 2, insert the handle into the red handle receivers, press the buttons in, and continue to push down until the silver button pops through the hole, securing the handle in place.

### LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the BALLHOPPER Basket ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.