


### PACKAGE CONTENTS


1 - Ballhopper Rollerhopper 150




### HANDLE ASSEMBLY

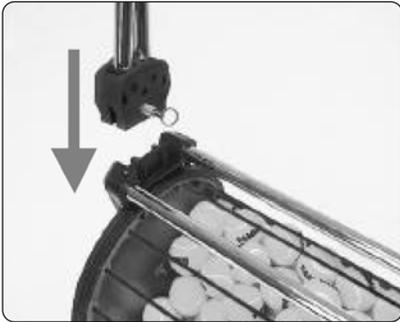

Step 1: Grab the ring of the Handle Block Pin, pull away from the Handle/Leg, turn 90 degrees and release the ring into the groove that holds the pin in the out locked position. Repeat for the other side.

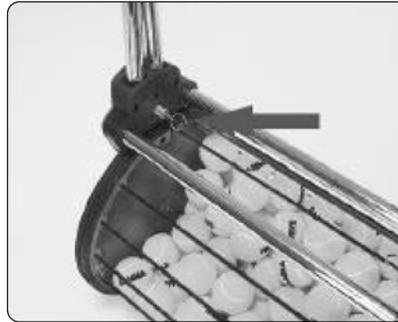

Step 2: Insert Handle/Leg into the Yoke, pull the Handle Block Pin ring away from the Handle, turn 90 degrees and release the pin until it locks into the Yoke. Repeat for the other side.

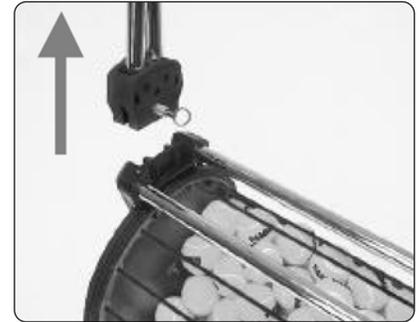

NOTE: To remove the Handle/Leg for transport or storage, reverse Steps 1 and 2.

### BALL PICK UP



Step 1: Make sure the Yoke Spring Pin is disengaged from the Wheel hole.



Step 2: Push the Rollerhopper forward over loose tennis balls.


### STANDING THE ROLLERHOPPER



Step 1: Release the Leg Clip from the Handle/Leg.




Step 2: Move the Legs outward and snap the Leg Clip into position between the two Handles/Legs.

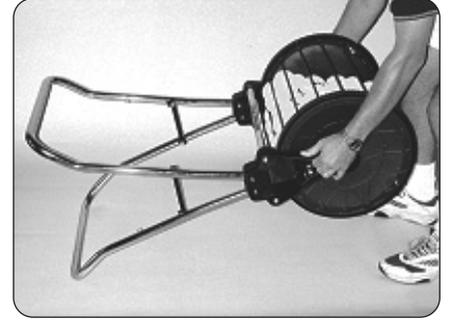

Step 3: When Handles/Legs are locked in the open position, lift the Rollerhopper into a standing position by the Yoke.

### LOCKING THE WHEEL

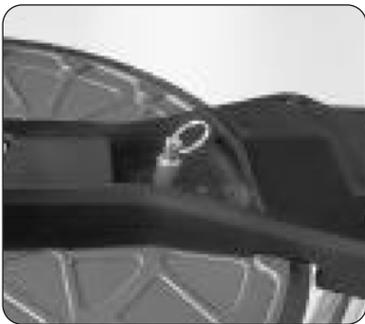

NOTE: Before opening the Wheel to feed or dump balls, be sure to engage the Yoke Spring Pins into the holes on each side of the Wheel.

IMPORTANT: When engaging the Yoke Spring Pins into the Wheel holes, be sure to align the holes with the pins **BEFORE** engaging. Do not spin the Wheel until the pins clicks into position. This will cause damage to the Wheel over time that is not covered by the warranty.

### FEEDING AND CARTS



Feed tennis balls directly from the Rollerhopper 150.




Dump tennis balls into a Ballhopper teaching cart.

### LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the BALLHOPPER Pickup ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.

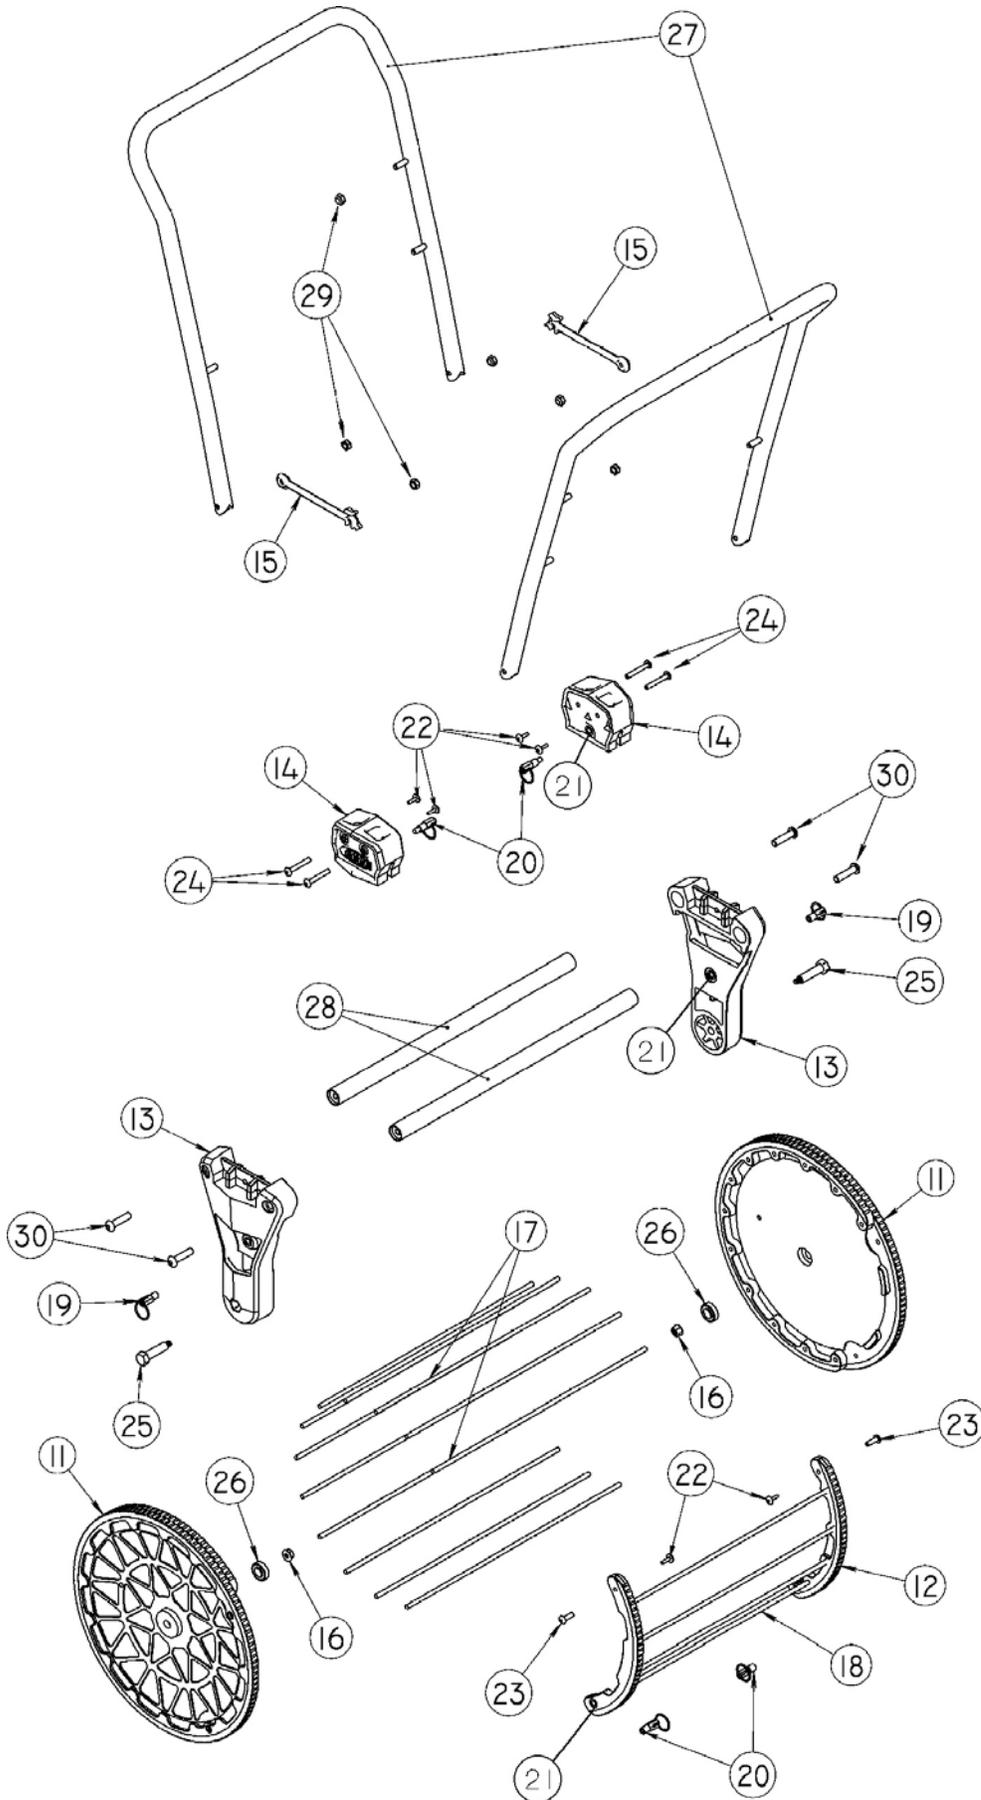

### PARTS CODES:

- BHRHP 11 - Wheel
- BHRHP 12 - Hatch
- BHRHP 13 - Yoke
- BHRHP 14 - Handle Block
- BHRHP 15 - Leg Clip
- BHRHP 16 - Axle Flange Nut
- BHRHP 17 - Wheel FRP Rod
- BHRHP 18 - Hatch FRP Rod
- BHRHP 19 - Yoke Spring Pin (long)
- BHRHP 20 - Hatch Spring Pin (short)  
Handle Block Pin (short)
- BHRHP 21 - Male Bolt Connector
- BHRHP 22 - Threaded Inserts
- BHRHP 23 - Hatch Bolt Female
- BHRHP 24 - Leg Barrel Bolt Female
- BHRHP 25 - Axle Bolt
- BHRHP 26 - Axle Bearing
- BHRHP 27 - Handle / Leg
- BHRHP 28 - Cross Tube
- BHRHP 29 - Leg Clip Nuts

## ballhopper® Rollerhopper™ 150

