

GAMMA PROGRESSION Floor Stand

ASSEMBLY INSTRUCTIONS

Base Assembly

Remove the Lower Support Column from the carton. This is the larger of the two posts. Align the holes in the Base Leg with the matching holes in the Lower Support Column Post Plate. Loosely secure the Base Leg with one button head cap screw, inserted through the Lower Support Column Post Plate, the hole in the leg and threaded into the Bottom Plate. Repeat this procedure for the three remaining Base Legs.

Once all Base Legs are in place, securely tighten the cap screws. Place one lock washer and one locking nut on each screw, where it protrudes from the Bottom Plate, and tighten securely with the 10MM Box Wrench.

Support Column Assembly

Insert the Upper Support Column into the Lower Support Column / Base Leg assembly. Leave the Upper Column extended about 1/2 of its length and lock in place with the two Column Height Lock Screws located at the top of the Lower Column Support. Position the Support Plate over the Upper Support Column Flange Plate and align the four holes. Secure the Support plate with the four button head cap screws provided.


Attachment of Progression Machine Base

Remove the four feet from the base of the Progression machine and rest the base on the Support Plate (for Progression ST machines position the turntable end over the notched end of the support plate). Align the four corner holes of the Progression machine base with the four corner holes of the support plate and secure the base of the machine with the four feet and large washers provided with the Floor Stand.

Base Foot Height Adjustment

Each foot of the Floor Stand can be adjusted to compensate for uneven surfaces.

Remove the Endcap from the leg to be adjusted, loosen the Base Foot Nut located inside of the leg tube with the 10MM wrench. Adjust the foot to the desired level by turning the hex nut located between the Base Foot and the the Leg Tube. Tighten the hex nut inside the leg tube to lock the foot in place. Replace the Endcap.

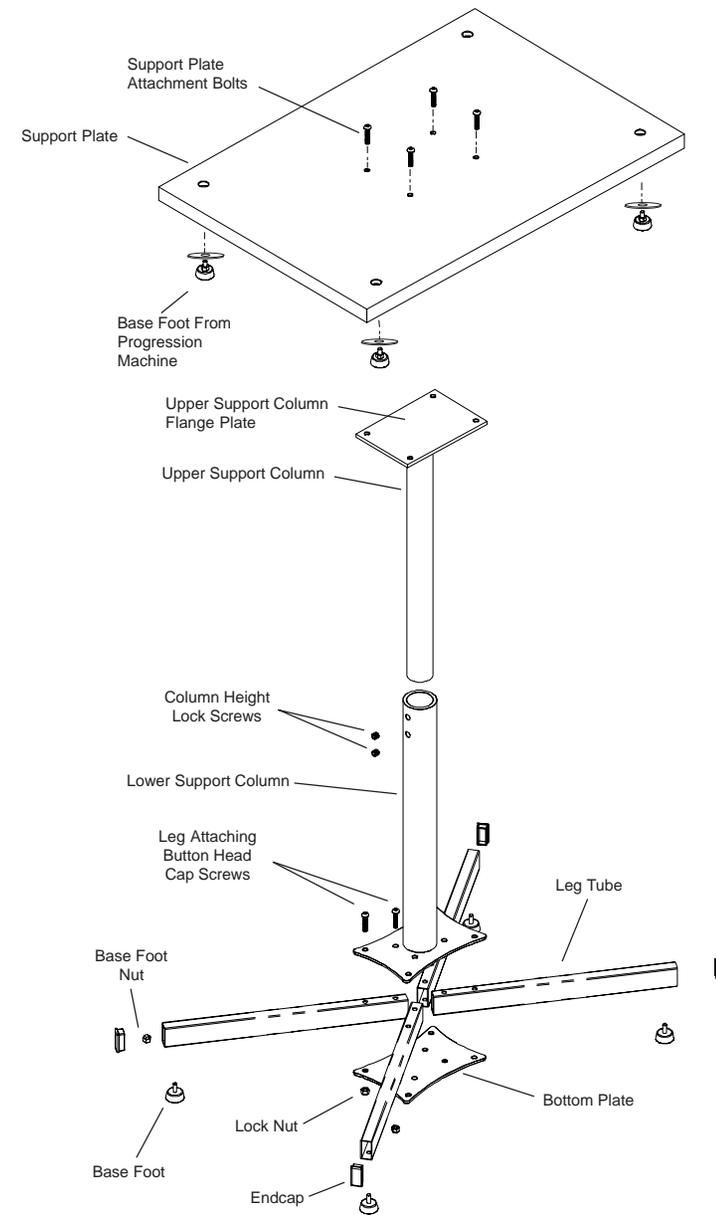

LIMITED WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the GAMMA Progression Floor Stand ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of five (5) years from the date of original purchase. Should any defects develop under normal use within the specified time periods, GAMMA will at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or part wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to repair or replacement of defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall in no event be liable for any incidental or consequential damages.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments.