



### PACKAGE CONTENTS

- 1 - Center Mast Assembly
- 1 - Score Card Rod & Loops Assembly - Right
- 1 - Score Card Rod & Loops Assembly - Left
- 1 - Name Card Rod & Loops Assembly - Right
- 1 - Name Card Rod & Loops Assembly - Left
- 2 - Set Indicators
- 1 - Mast Holder w/ Clamp
- 1 - Mast Holder Clamp (loose)
- 1 - Score Card Set - Red
- 1 - Score Card Set - Black
- 2 - Name Cards
- 1 - 10mm Wrench
- 1 - Dry Erase Pen - Black
- 1 - Pen Clip
- 4 - Jam Nuts & Lock Washers (Score Cards / Name Cards)
- 4 - Screws - 5mm x 34mm (Set Indicators)
- 4 - Lock Nuts - 5mm (Set Indicators)

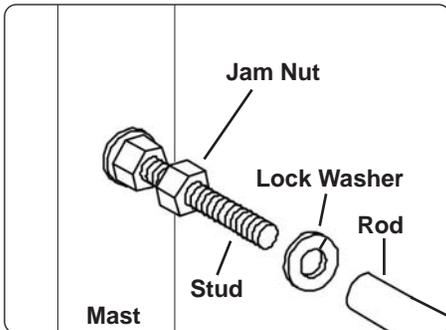


Step 1: Starting at the top, screw 1 Jam Nut onto the Stud until it is tight against the pre-installed Jam Nut. Place a Lock Washer on the Stud against the Jam Nut. Install 1 Score Card Rod onto the Stud until fully seated against the Jam Nut you installed. Align the Rod so loop openings are at the rear (see image on next page).

**IMPORTANT:** While holding Rod, tighten the Jam Nut you installed against the Rod (loosen Jam Nut away from Mast). Repeat assembly on remaining 3 Studs.

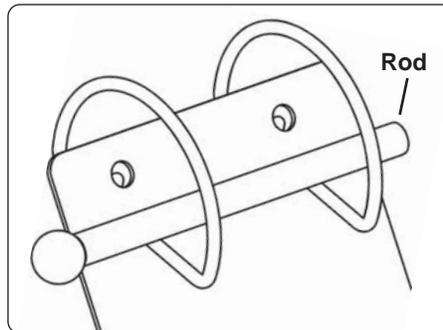


Step 2: One at a time, tilt the cards as shown. Align and insert the ends of the loops through the holes in the cards. Repeat for the remaining cards being sure to properly orient the numbers.

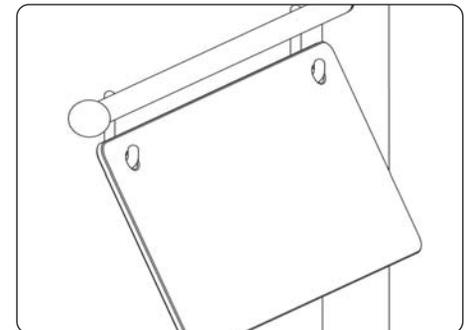


Step 3: Align the holes in the Name Card with the hook of the Name Card Rod. Apply gentle pressure to the card until it snaps into place on the hooks. The card may need to be tilted for installation.


Step 4: Attach and tighten one of the Clamps to the bottom hole and one of the Clamps to the bottom hole of the Master Holder using the included 34mm Screws and Nuts. Place the Master Holder near the top of the net post, making sure no parts of the net post will interfere with the installation and removal of the Center Mast. Finish by securely tightening the Clamps.

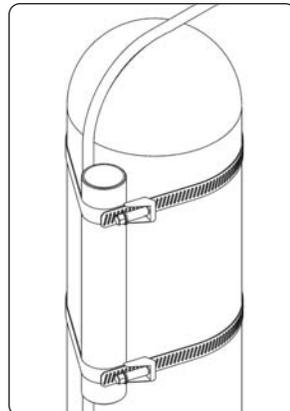

Step 5: Align the hole in the Set Indicator with the hole in the Center Mast. Insert one 34mm Screw through the Set Indicator and Center Mast. Secure the Set Indicator with one Locking Nut using only enough pressure to hold the Set Indicator in place when rotated to the desired position. Do not overtighten or breakage may occur.

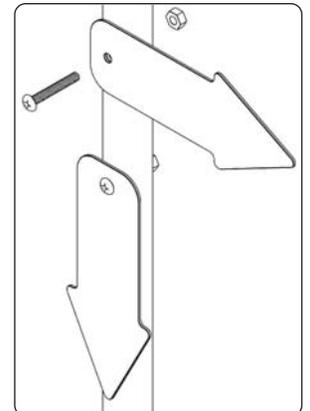

### PARTS

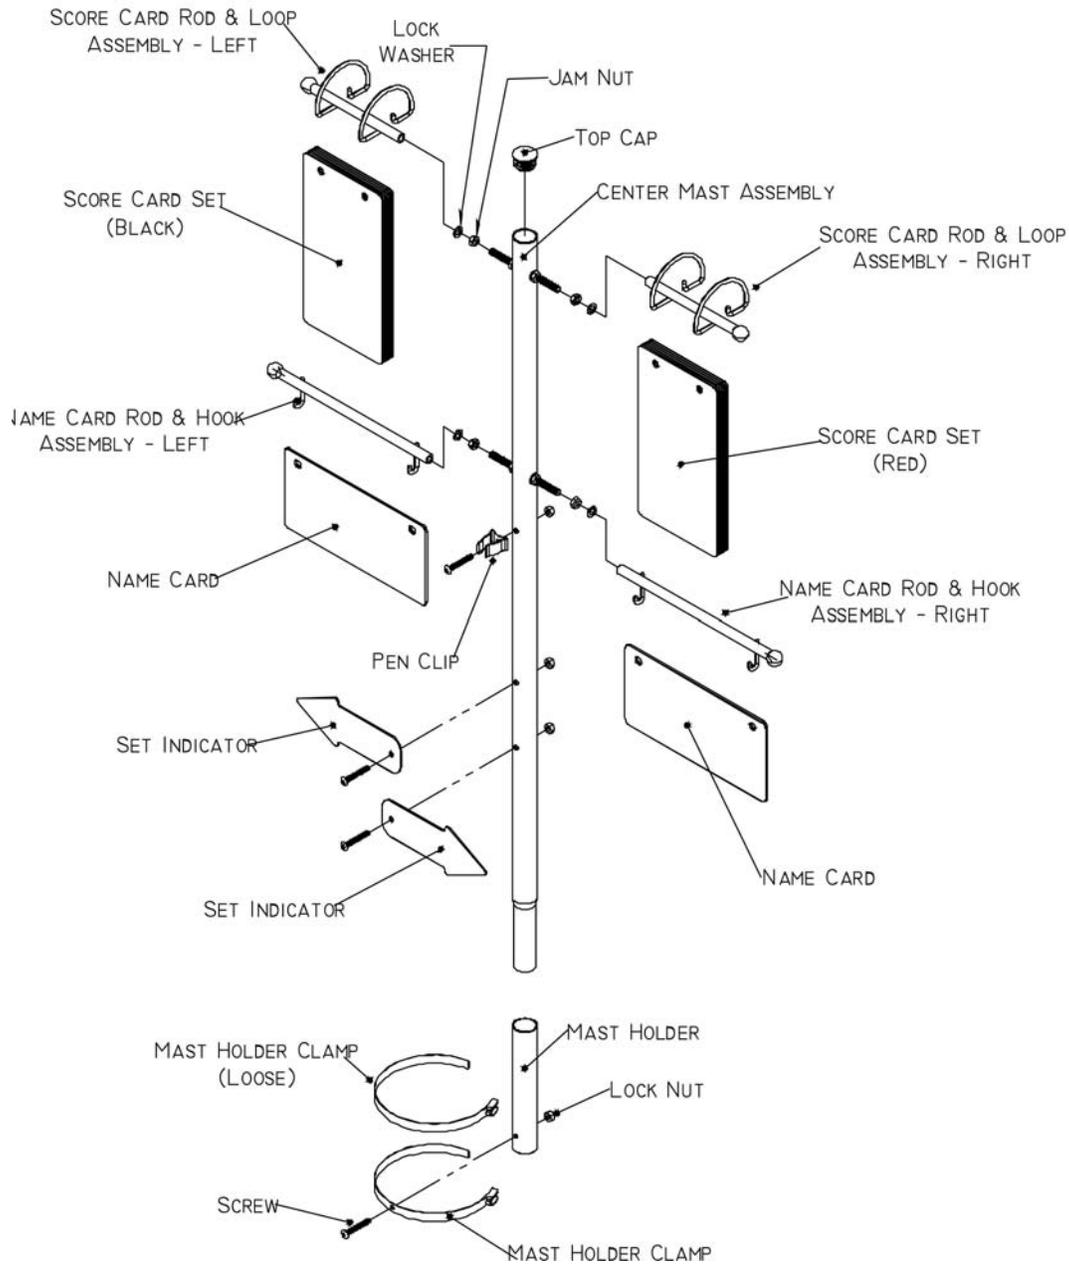

### LIMITED ONE-YEAR WARRANTY

GAMMA SPORTS ("GAMMA") warrants to the original purchaser that the Premium Score Reporter ("EQUIPMENT") purchased is free from defects in materials and workmanship for a period of ONE (1) year from the date of original purchase. Should any defects develop under normal use within the specified time period, GAMMA will, at its option, repair or replace the defective EQUIPMENT provided it is returned to GAMMA prepaid at the purchaser's expense. This warranty does not apply to any damage or defect caused by negligence, abuse, misuse, unauthorized alteration, shipping, handling, or wear and tear as a result of normal use.

GAMMA's obligation under this warranty is limited to replacement or repair of the defective EQUIPMENT, and no one is authorized to promise any other liability. GAMMA shall, in no event be liable for any incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights which vary from state-to-state.

To return defective EQUIPMENT, a return authorization (RA#) must be obtained from a GAMMA customer service representative by calling 1-800-333-0337. The RA# must be clearly marked on the outside of the shipping carton being returned. All returns must be shipped prepaid by the customer to GAMMA. Please retain the original shipping carton and packing materials for any future shipments. GAMMA will not be responsible for EQUIPMENT which is not returned in the original undamaged packaging.